




## IsatDock2 **MARINE**

### Quick Start Guide

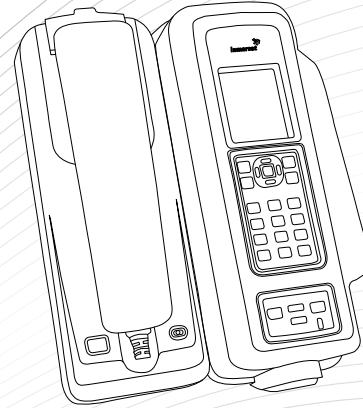

Suitable for the IsatPhone 2




www.beamcommunications.com

BEAM Communications Pty Ltd  
5/8 Anzed Court, Mulgrave  
Victoria, 3170, AUSTRALIA  
Web: www.beamcommunications.com  
Information: info@beamcommunications.com  
Support: support@beamcommunications.com  
Tel: +61 3 8588 4500  
Fax: +61 3 9560 9055

PART #: USROS6008301

## 1. IsatDock2 MARINE Equipment Overview

1. Cover Lock Clasp
2. Marine Cover
3. Mounting Cup  
(spring or springless cup options)
4. Privacy Handset
5. Speaker (under handset)
6. Microphone
7. Speakerphone Button
8. Cover Seal
9. IsatPhone 2 Eject Button
10. IsatPhone 2 (not included)
11. Function Buttons
12. Status Indication LED
13. Back Panel Connectors
  - a. USB Data Interface
  - b. BEAM Alert Loop connection
  - c. RJ11/POTS interface
  - d. DC power and accessory input
  - e. RJ9 Privacy handset
14. IsatDock2 Adapter

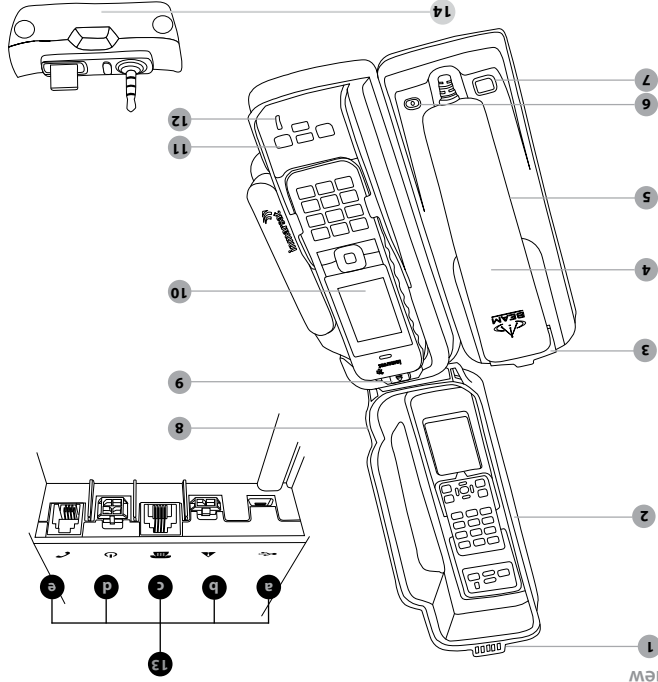

## 2. Specification Summary

Average Power Consumption Current @ 12V	Average	Watts
Power w/o IsatPhone 2	130mA	1.6W
Standby + Charging	360mA	4.3W
Transmit + Charging	875mA	10.5W
Sleep Mode	5mA	60mW
Peak Current	3.5 A	42W
Physical Specifications	Metric	Imperial
Dimensions	276 x 208 x 100 (mm)	10.9 x 8.2 x 3.9 (inches)
Weight - dock	1.67kg	3.67lbs
Total Kit Weight	2.72kg	5.99lbs
Environmental Specifications		
Operating Range	-30°C to +70°C	-22°F to +158°F
Storage	-35°C to +85°C	-31°F to +185°F
Battery Charging Temp*	0°C to +45°C	+32°F to +113°F
Humidity		<= 75% RH


I/O Alert	
1 x BEAM Alert Loop	Bare wire - "Normally closed" loop IN to OUT
Personal Alert	In-built - single key press
Connectors / Interfaces	
POTS/RJ11	RJ11 2-wire, 5REN @ 600m adjustable dial, ring, busy tone configured frequency and adaptive impedance.
BEAM Antenna	TNC-Female
GPS Antenna	SMA-Female
10-32V DC	4-way microFit (AC/DC adapter, or DC lead)
Privacy Handset Port	RJ9 connector
Configuration/Data	USB Micro
Speaker phone	In-built speaker/microphone

\* It is ideal for the ambient temperature to be approximately 18 degrees below the 45°C upper limit for the handset to charge the battery whilst docked.

3. Antenna Connection

To connect the IsatDock2 MARINE to the GPS/BEAM Antenna, requires the use of certified satellite and GPS antenna cables. These cables are purpose built cables as approved by BEAM to manage the power requirements for the antenna system.

- 1. Refer to the antennas installation guide for antenna mounting and location requirements.
- 2. Connect the antenna cable labelled "GPS" to the SMA antenna connector labelled "GPS".
- 3. Connect the antenna cable labelled "Inmarsat" to the SMA antenna connector labelled "SAT".
- 4. Connect the GPS-SMA (Female) cable end to the IsatDock2 MARINE's SMA connector.
- 5. Connect the TNC (Female) antenna cable end to the IsatDock2 MARINE's satellite connector.

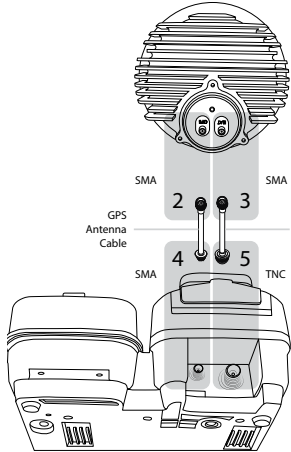


**WARNING**  
DO NOT pull with force on the cables from the rear of the IsatDock2 MARINE. Please install strain relief clamping for the antenna cables where required. Correct installation of the antenna system is a vital part of the IsatDock MARINE system, to ensure reliable functionality, and drop-free calls.

**WARNING**  
Changes or modifications not expressly approved by BEAM Communications could void the product warranty.  
**WARNING**  
To satisfy FCC RF exposure requirements for mobile transmitting devices, a separation distance of 55 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.


4. Privacy Handset and Mounting Cup

There are two unique mounting cups fit for the privacy handset. (1) springless cup for either a desk mounted cradle position or a wall mounted cradle position. (2) spring cup for heavy duty use.

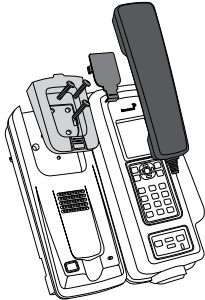


(1) Springless Cup  
Desk mounted cradle position

The 'springless' cup is fitted to the docking station with the mounting clip in a 'flush' position.

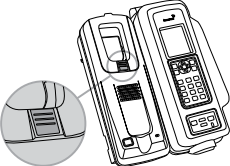


Wall mounted cradle position

The mounting clip can be slid out and reversed, producing a protruding point that the Privacy handset rests upon. For a wall mounted docking station this retains the privacy handset and the springless cup has enough height to allow the handset to rise up off the clip and out of the mounting cup. This option would be best suited for stable conditions

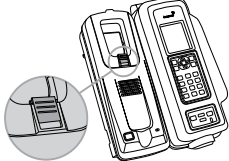


(2) Spring Cup - Heavy duty use

In harsh environments, the Privacy handset is actively retained in the mounting cup. This is achieved by using the 'spring' mounting cup. To remove the handset from the cup, the phone is lifted up against the pressure of the spring until it clears the lower mounting pip and can be removed from the docking station.


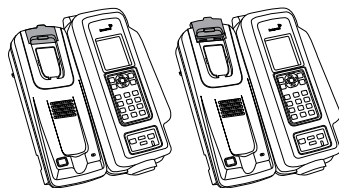


5. Docking and Un-docking your IsatPhone 2


- 1. Lift the antenna 'cover' and rotate through 180 degrees, then push down into the open position.
- 2. The 'cover' in the base of the phone should be rotated 180 degrees to be in the open position

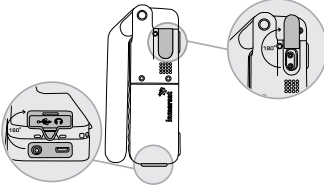

 
- 3. Detach the USB/Audio adapter from the dock and insert by hand in the base of the IsatPhone 2.

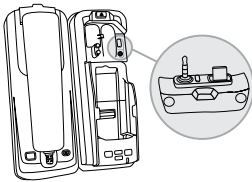

- 4. To dock the handset, open the antenna slightly, align the IsatPhone 2 with the phone tray and slide the handset down until it seats flush to the bottom of the tray. Swing the phone down into the cradle by applying pressure to the top of the handset. An audible 'click' is heard when the phone is in the docked position.

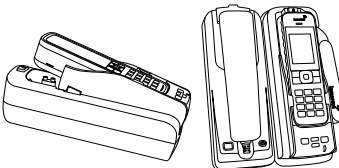


- 5. To remove the handset from the cradle, press the EJECT button at the top of the docking station. The dock will swing out and the handset can be removed.
- 6. Place the adapter back in its dedicated slot, when the phone is not in the docking unit.

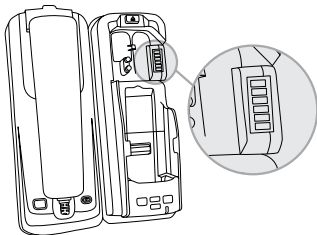

6. Mounting Orientation

There are four keyhole shaped slots in the mounting bracket that mate with feet on the rear of the docking station. To attach the bracket, the larger end of the keyhole will pass over the feet. The dock is then slid down to lock the feet into the narrow section of the keyhole.

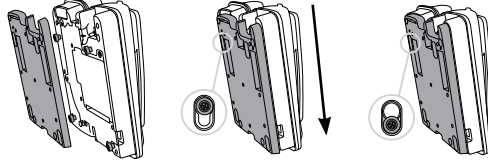

- a Fit the docks feet in large holes of the bracket
- b Slide Dock down
- c Final lock position

The IsatDock2 MARINE can be mounted either flat on a desk or vertically to a wall. When wall mounting the docking station, the wall bracket is first screwed to the wall and the dock is slid into place. One security pin is then slid into place locking the dock to the wall.


The docking station can be elevated in the desk mounted orientation by two retractable feet included in the mounting bracket.



**NOTE:**  
For extensive mounting instructions please refer to your IsatDock2 MARINE Manual.

7. Access to rear connector bay

For the IsatDock2 MARINE, the external cable interfaces are at the rear of the docking station. The cover panel creates the IP rating for the electrical interface and retains the cables in their respective channels. The cover panel is fixed in place by 7 screws.

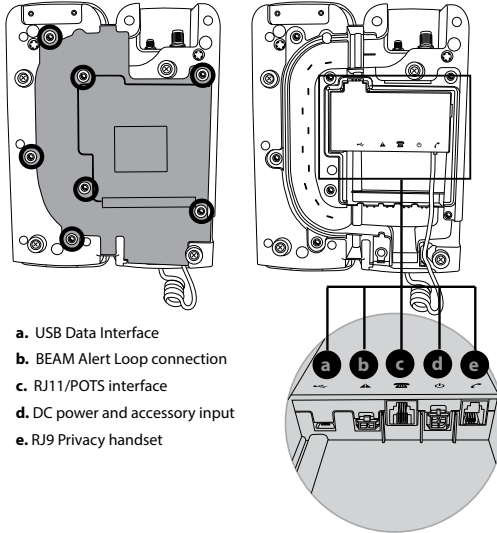

- a. USB Data Interface
- b. BEAM Alert Loop connection
- c. RJ11/POTS interface
- d. DC power and accessory input
- e. RJ9 Privacy handset

9. IsatDock2 MARINE Front Panel

Location	Button Mode	Action	LED/Sound
	Mute Press ON/OFF	<b>In a Call:</b> Mute the microphone (uplink) on the privacy handset if connected to cradle.	LED turns RED - Muted LED turns OFF - Not muted LED flashing Yellow - RJ11/POTS in use
 OR 	UP/DOWN	<b>In a Call:</b> Increase/decrease volume on the internal hardware or privacy handset (optional accessory) if connected to cradle. <b>Out of Call:</b> Increase/decrease volume of incoming ring tone on the internal hardware speaker.	Audio will sound louder/quieter in privacy handset with each press. A beep will sound indicating the increased/decreased ring tone volume
	Single Press (1 second)	Send a Personal Alert message to the IsatPhone 2's pre-configured destination *	A beep will sound to indicate that a Personal Alert button was pressed.*
+	Brightness dual button simultaneous press (1 second)	<b>Out of Call:</b> Enter LED brightness change mode. Press UP and DOWN arrows to vary intensity. Mode will automatically exit after 5 seconds after the last button press.	All LED's will change to WHITE and a double beep will sound when entering brightness change mode. A short single beep will sound when exiting change mode.
	Speakerphone press ON/OFF	<b>In a Call:</b> Terminate call if speakerphone mode is active Activate speakerphone mode if Privacy Handset mode is active. <b>Out of Call:</b> Answer inbound call in speakerphone mode	LED turns GREEN - Speakerphone mode active LED turns OFF - Speakerphone mode not active

\* This action is optional, only when the Personal Alert Mode for your IsatPhone 2 is configured.  
\* A beep will only sound if audible alerts are enabled in the Falcon