



To create a new APN (for example, **bgan-usa.inmarsat.com**) please do following:


1. Run LaunchPad
2. Select “LaunchPad APN Option“ from “BGAN Services” menu

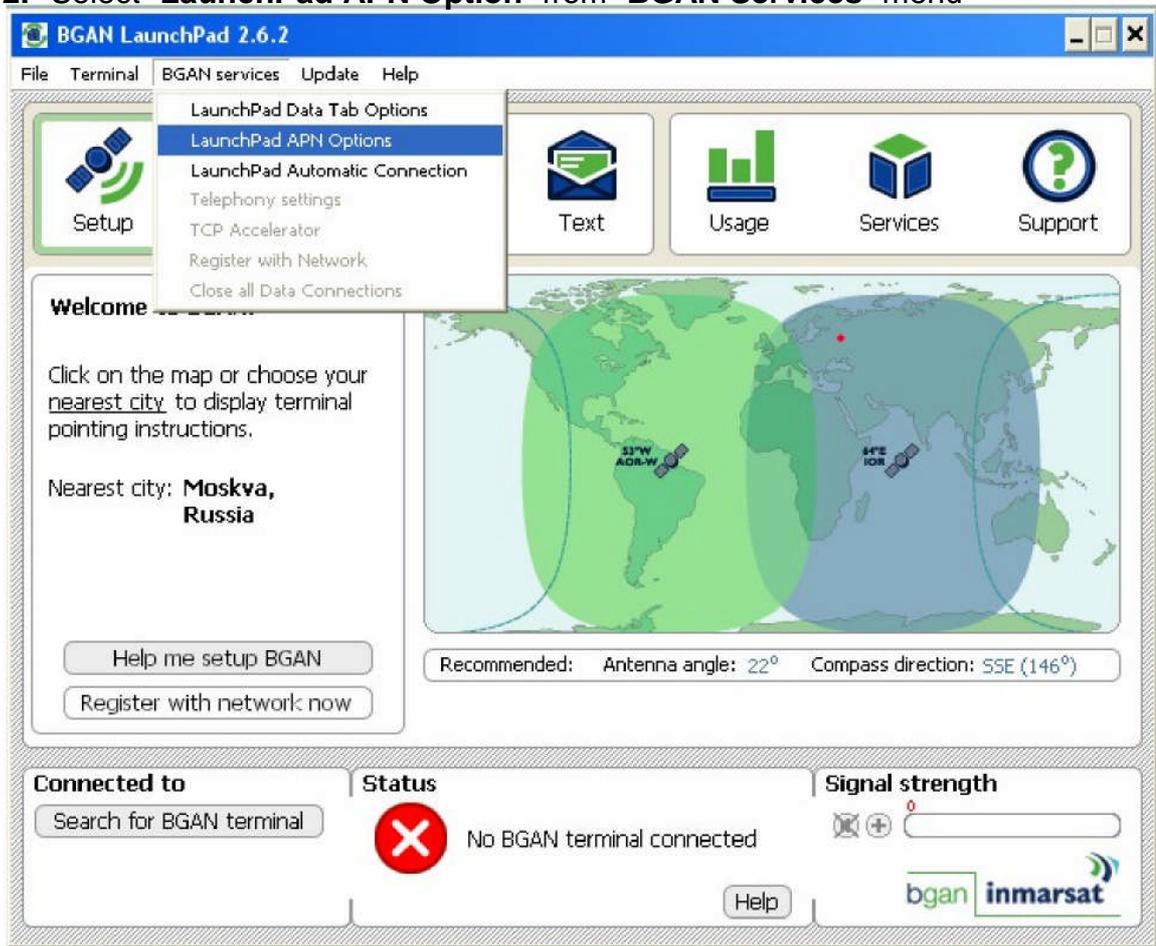

3. Press “Add” button

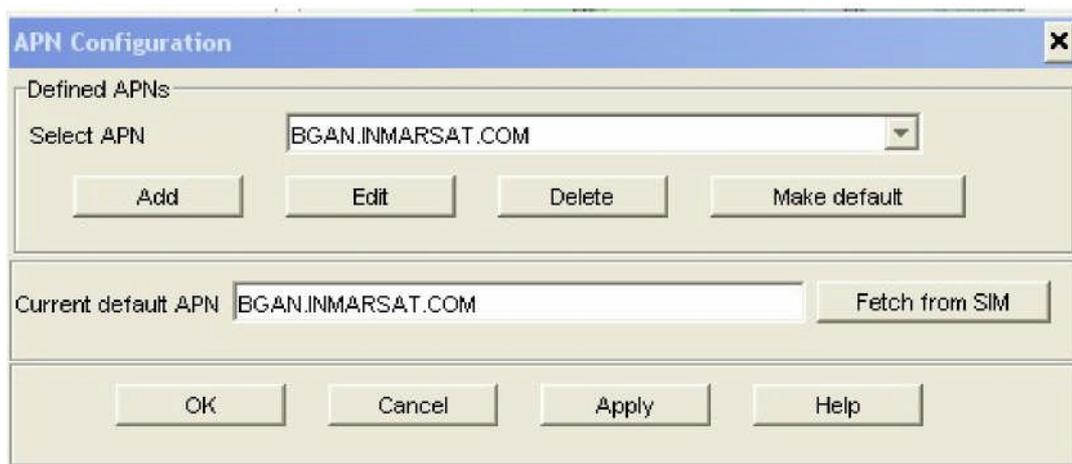


4. Enter bgan-usa.inmarsat.com APN as shown below and press “Apply” button

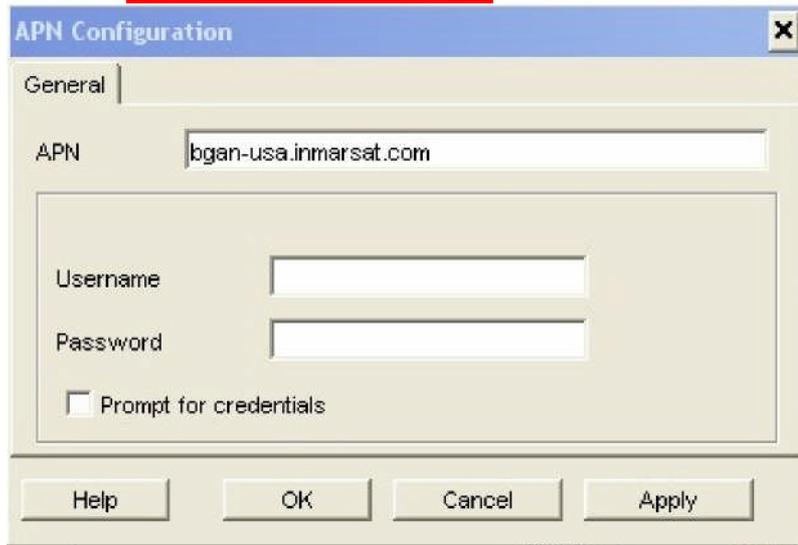


The image shows a dialog box titled "APN Configuration" with a close button (X) in the top right corner. The "General" tab is selected. The "APN" field contains the text "bgan-usa.inmarsat.com". Below this are two empty text boxes for "Username" and "Password". A checkbox labeled "Prompt for credentials" is unchecked. At the bottom, there are four buttons: "Help", "OK", "Cancel", and "Apply".

5. Confirmation window will pop-up, press “OK” button

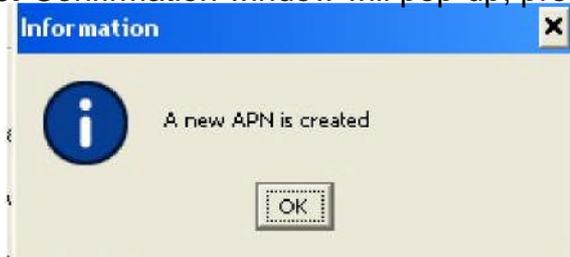


The image shows a small dialog box titled "Information" with a close button (X) in the top right corner. It features a blue circular icon with a white lowercase 'i' on the left. To the right of the icon, the text reads "A new APN is created". At the bottom center, there is an "OK" button.

6. Now select new created APN bgan-usa.inmarsat.com and press “Apply” button again:

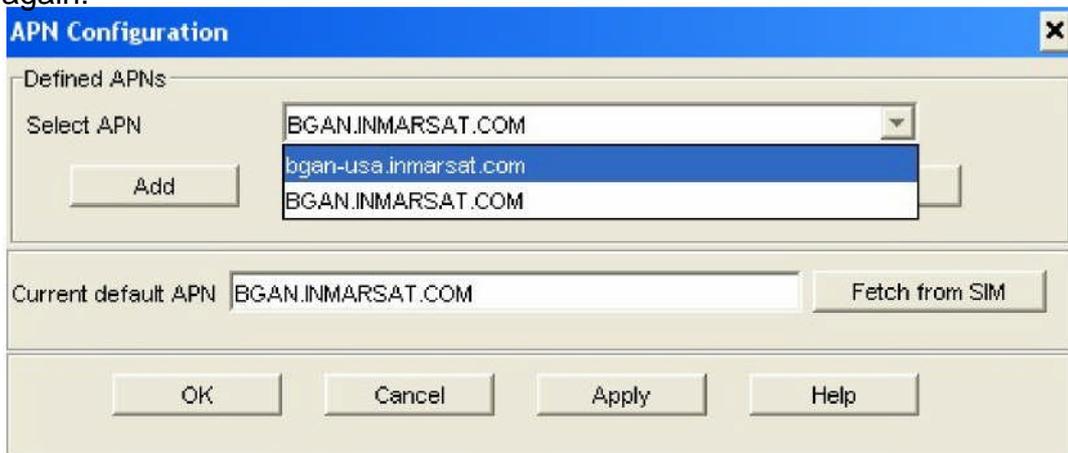

The image shows the "APN Configuration" dialog box again, but with a blue header bar. The "Defined APNs" section contains a list box with three entries: "BGAN.INMARSAT.COM", "bgan-usa.inmarsat.com" (which is highlighted in blue), and "BGAN.INMARSAT.COM". To the left of the list box is an "Add" button. Below the list box is a "Current default APN" field containing "BGAN.INMARSAT.COM" and a "Fetch from SIM" button. At the bottom, there are four buttons: "OK", "Cancel", "Apply", and "Help".

7. Now you will see that default APN changed to your new APN value:

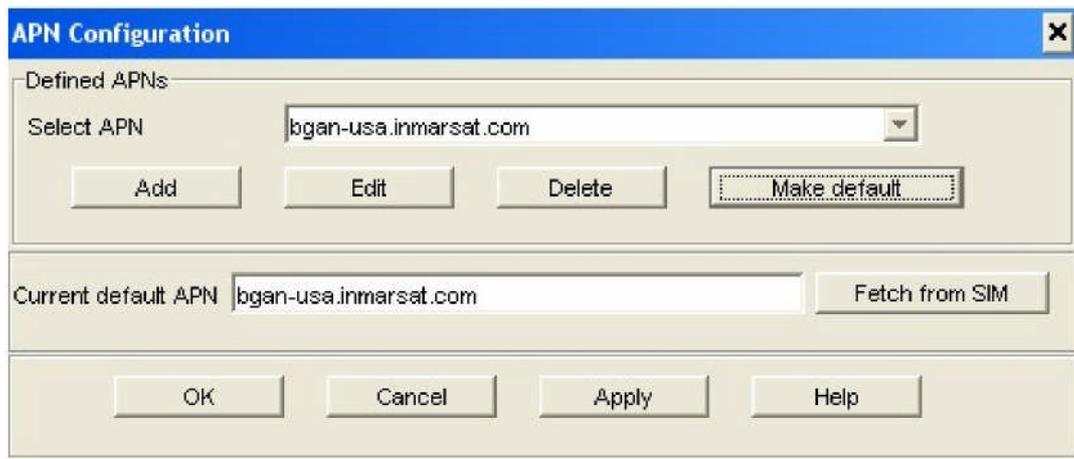


And press “OK” button.

8. Your new APN is ready to use.


9. To check that the APN for a specific IP-data connection is set to the default:
In BGAN LaunchPad, select the **Data** tab.




The following screen is displayed:

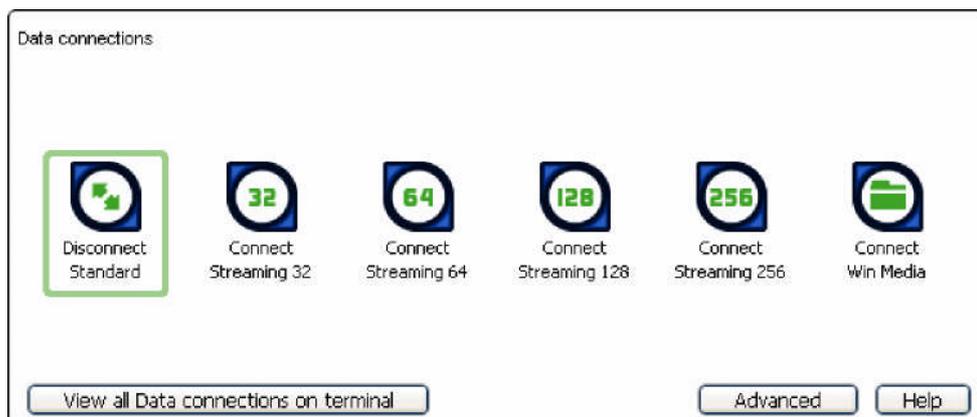

10. Right-click on the connection you want to check, and select **Edit**. The Connection Icon Setup screen is displayed, as shown below:

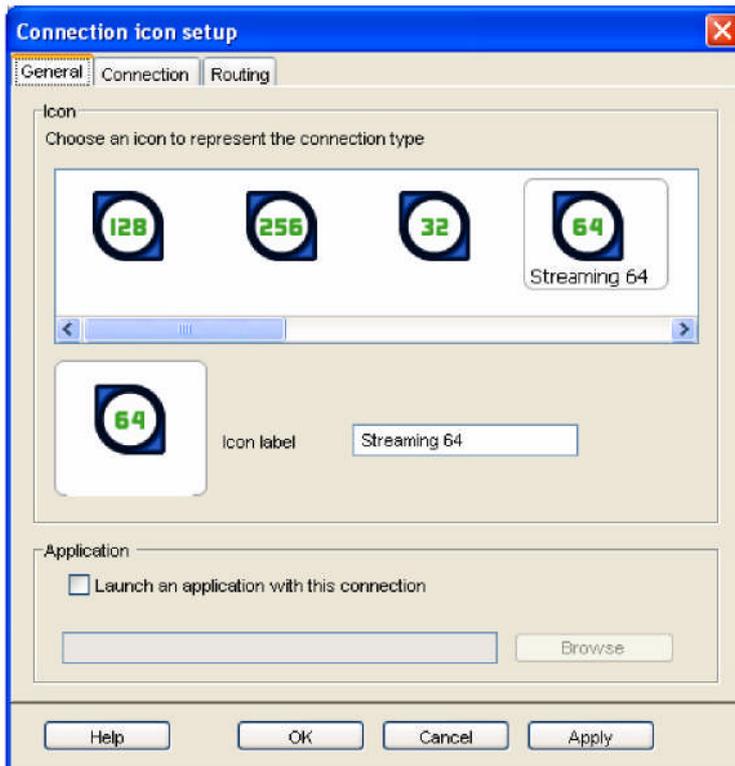

11. Select the **Routing** tab to display the following screen:

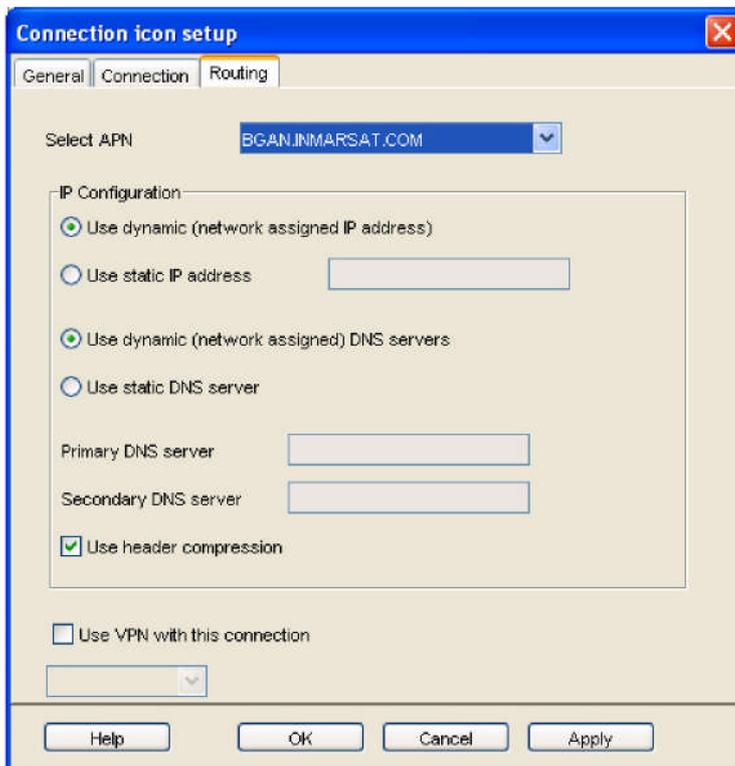

12. Check the displayed APN in the Select APN field. If it is not correct, select the required APN from the drop-down list and click on OK.

TIP: Some Distribution Partners assign usernames and passwords to the APN. You may need to enter these when accessing or changing APN details (see step 4 above).