


How to add Static IP address via the LaunchPad

Click on the “**BGAN Services**” menu in LaunchPad (found at the top of the toolbar in LP). Scroll down to “**LaunchPad APN Options**” and click on this option.




Check the displayed APN in the **Select APN** field. If it is not correct, select the required APN (for example, **mvs.bgan.inmarsat.com**) from the drop-down list and click on the “**Edit**” button.

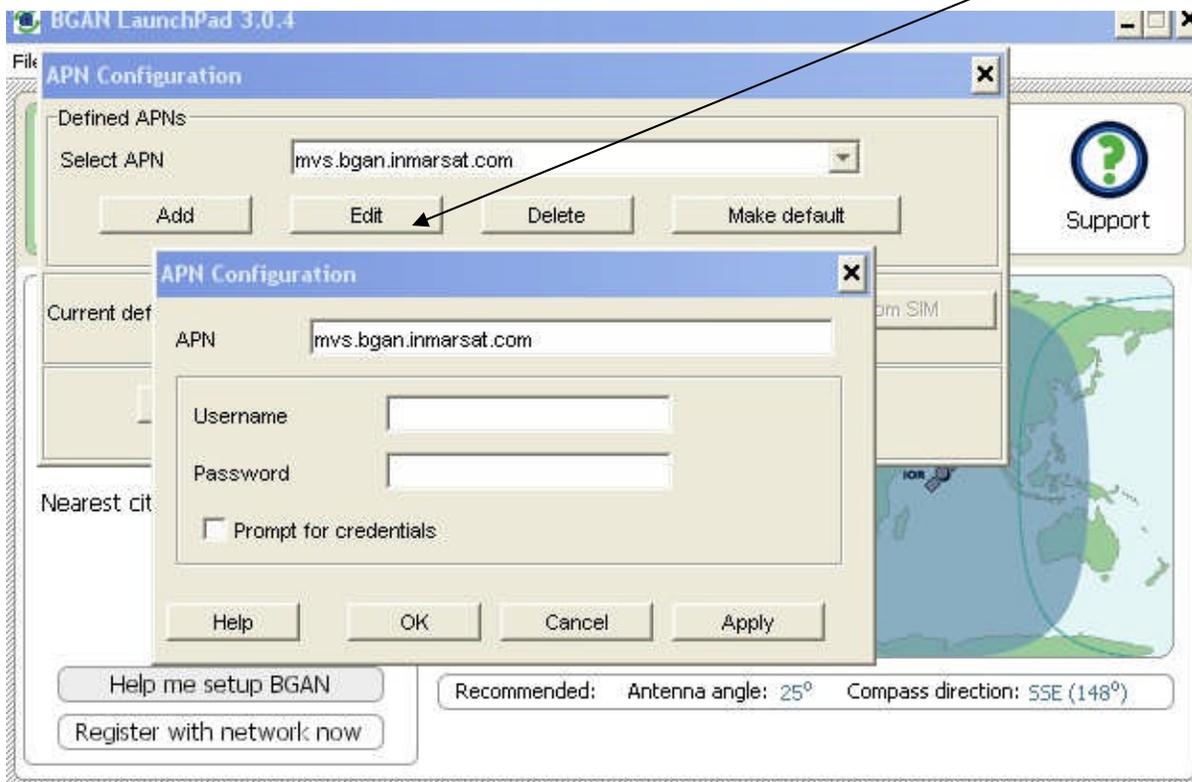


Type in the **Username** and **Password** (supplied by your Service Provider) in the respective boxes. Click **OK** button, and **OK** again.

In the **Data** section, you must edit connection properties to each of the selected icons e.g. '**Connect Standard**', '**Connect Streaming 32**' etc. This process must be repeated for each data icon as follows (if you planning to use static IP with these connections):

1. Bring up the LaunchPad and select the "**Data**" Tab

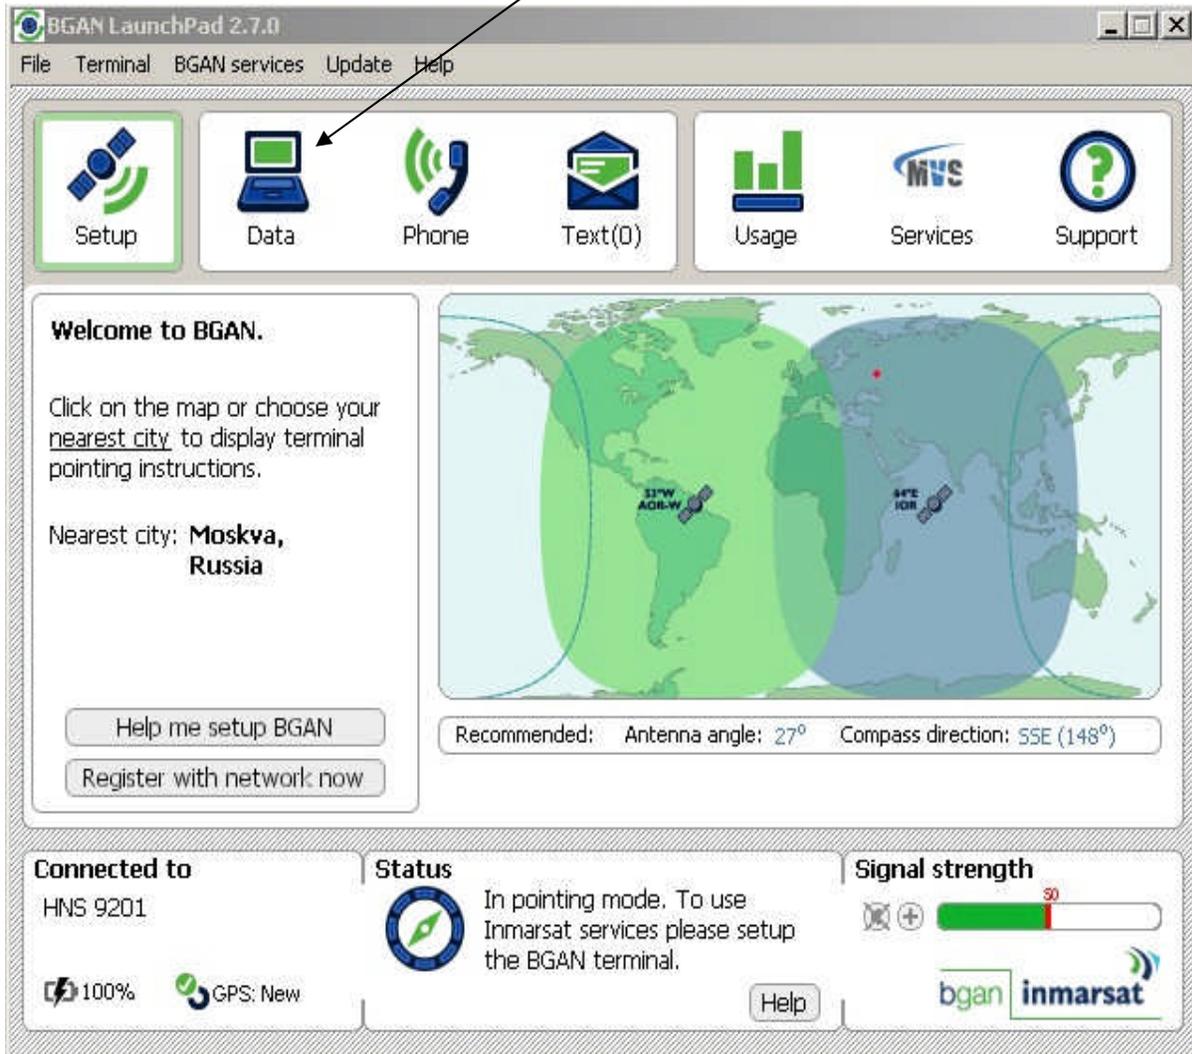


2. Click on the “Advanced” button

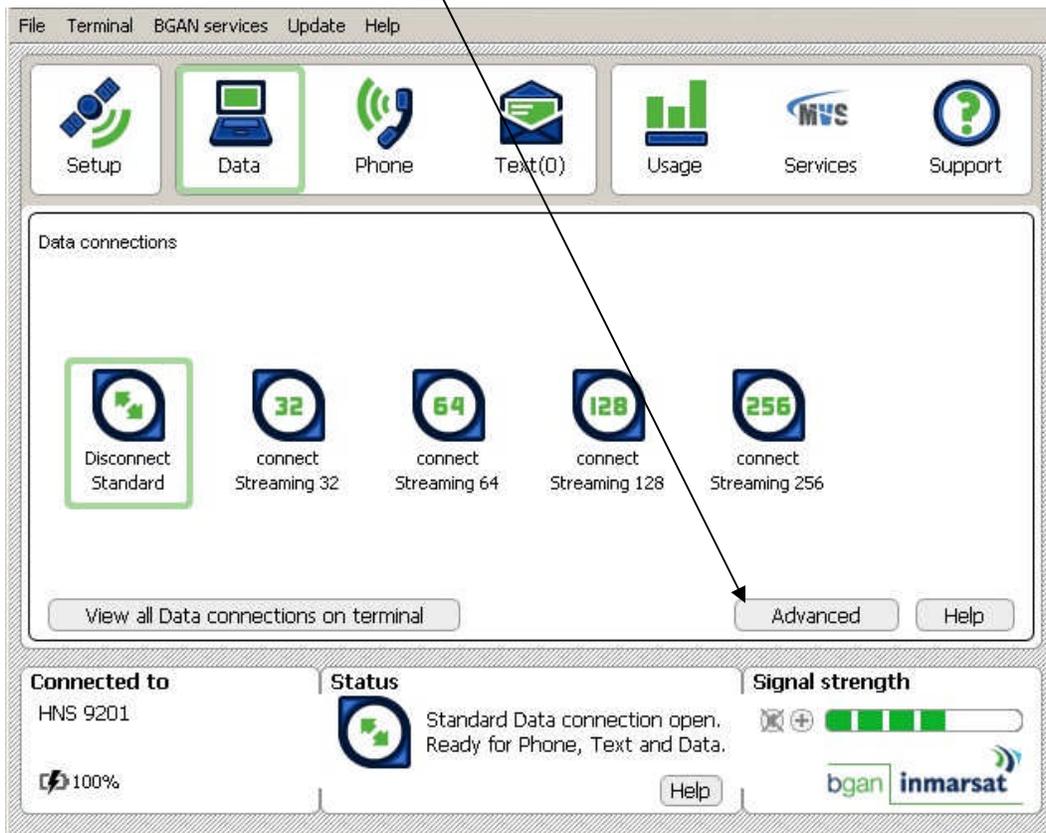

3. Select the Icon that you would like to configure (standard or streaming) for example, the **Streaming 32** icon.

4. Click on the “Edit” button:

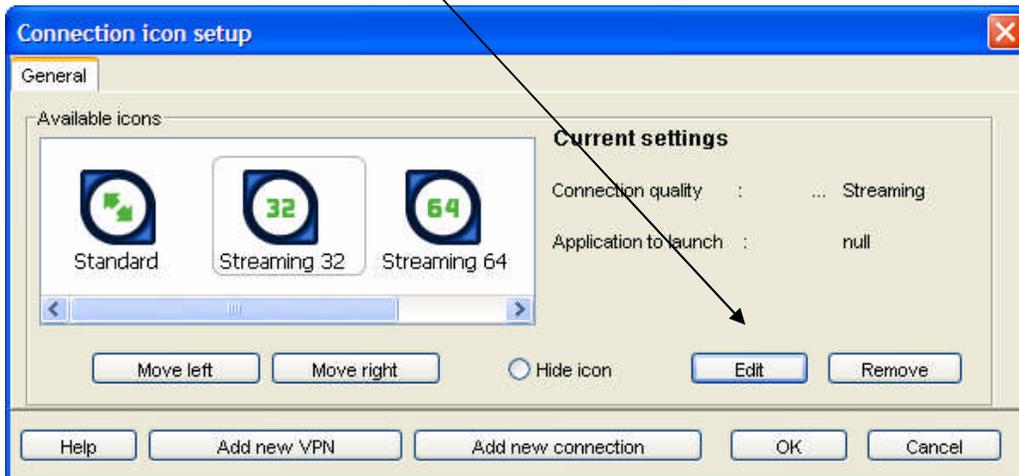

5. New window will pop-up:

Primary Connection

Icon

Icon label: 32 Static QoS

IP Data service

Standard

Streaming

Streaming Parameters


Desired Rate 32k

Minimum Rate 32k

Use error correction

6. Make sure you label your Icon – for example label it “Streaming Static” or a title of your choice (max number of characters allowed is 15).

7. Check the displayed APN in the **Select APN** field. If it is not correct, select the required APN (**mvs.bgan.inmarsat.com** for our example) from the drop-down list.
8. Click on the section **“Use Dynamic IP address”**, and press **“Apply”** button.

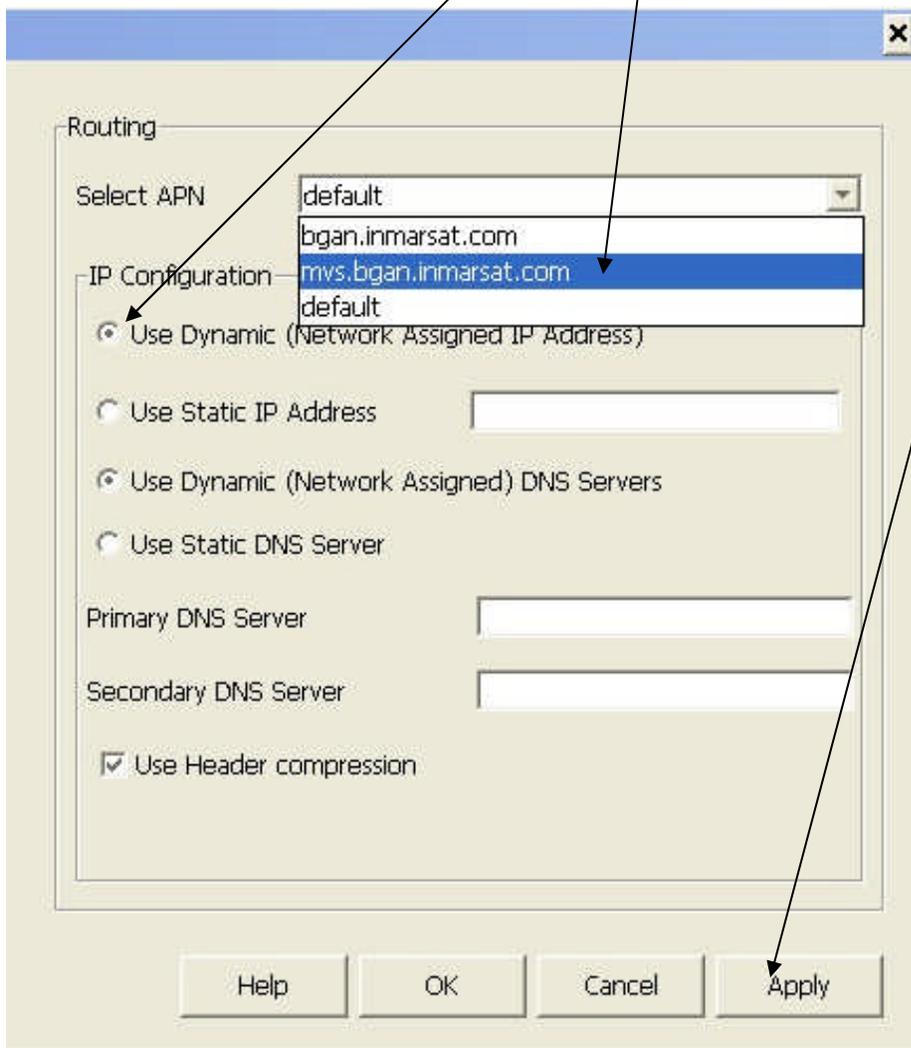

You have now successfully added the Static IP address to the LaunchPad.